

Frame Game Blanket

Approximate Finished Size: 66" x 46" (as shown)

Showcase your favorite Cuddle® panel print in this beginner-friendly blanket. The inner border adds an additional spark of color to the wider, self-binding edge.

Fabric Requirements (as shown)

- 1 Hoffman Zookeeper Digital Cuddle® Panel Blue
- 2 yds Luxe Cuddle® Galaxy Limeade for backing
- ½ yard Luxe Cuddle® Frosted Hide Maui for inner border

Suggested Notions

- 45mm Rotary cutter *or* blade
- Self-healing cutting mat
- 90/14 stretch machine needle
- Polyester thread
- Basting spray
- Flower head pins
- Fabric clips
- Stiletto
- Felt tip marker and/or ballpoint pen
- Walking foot

On cover: All stuffed animals made using Funky Friends Factory patterns: Sammy the Shark, Giraffe A.K.A. Riff, Mitch the Monkey, Mickey Moose, Ollie the Laid Back Owl, and Kiki Koala.



For the video tutorial,
scan the QR code or go to:
offers.shannonfabrics.com/framegame



Making The World A Softer Place™

The information in this pattern is presented in good faith.
Every effort has been taken to assure the accuracy herein.

© 2021 Shannon Fabrics Inc., 3131 S. Alameda St., Los Angeles, CA 90058
info@shannonfabrics.com | www.shannonfabrics.com | 866.624.5252

04.FGB

Frame Game Blanket




Frame Game Blanket

Approximate Finished Size: 66" x 46" (as shown)

DIRECTIONS

Read *Cuddle® Basics* before beginning.

Preparation

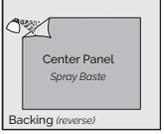
1. Find the center point of the panel by folding it in half, and then quarters. 
2. Mark the center of wrong side using a permanent marker or ballpoint pen.
3. Using the same method, mark the center of the backing fabric.
4. Spray baste the back of the panel.
5. With *wrong sides together*, match the marks of the panel and backing. 

Assembly

Cut and Sew the Inner Borders


1. Measure the height of the panel. Cut 2 inner side borders that are 3" x the panel height.
2. With right sides together, double pin side borders to center panel.
3. Using a 1/2" seam allowance, sew borders to the center panel.

Note: You will sew through all layers—border, center panel, and backing.

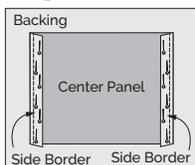


4. Flip inner borders toward the backing. Spray baste in place. Pin if necessary.

5. Measure the width of the panel *plus* the 2 side borders.
6. Cut 2 inner borders for the top and bottom that are 3" x the panel *plus* side border width.
7. Using the same method as the side borders, sew top and bottom borders to the center panel.
8. Flip top and bottom borders toward backing. Spray baste in place. Pin if necessary.

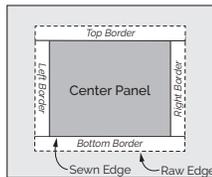


Trim the Backing




1. To determine the size of the backing, mark 6 1/2" beyond the raw edge of each inner border.
2. Trim the backing on this line.

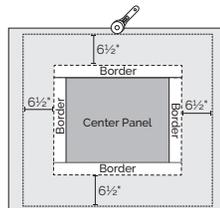

Finishing


1. At each corner, draw a line 3 1/2" in from the cut edge of the backing.
2. Through the intersection of the lines, draw a line at a 45° angle.

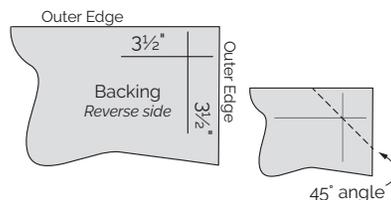

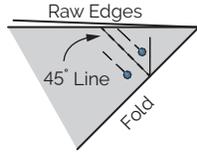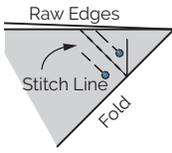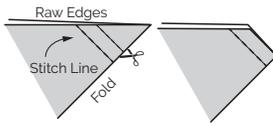
3. Fold the corners of backing, right sides together, to form a triangle, matching the lines of the 45° angle. 
4. Pin on both sides of the 45° line to form the miter. 
5. Sew between the pins on the drawn line. Miter all 4 corners.
6. Trim seam allowance to 1/2". Turn the corners right side out. Gently push out the corner points. 

7. Fold the binding over toward the inner border. The raw edge of the binding should sit about 1/2" past the edge of the inner border.

Note: If the binding does not reach past the raw edge, unfold the mitered corner and sew an extra 1/4" past the first miter stitching. Do not remove previous stitching.

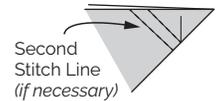

8. Pin the self-binding in place. Zigzag along the raw edge through all layers to secure.

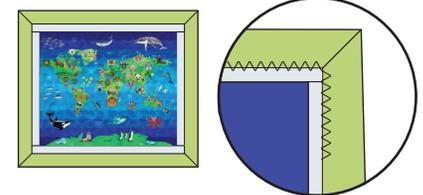

Cuddle® Basics

1. Trace measurements on wrong side of Cuddle® with a permanent marker or ballpoint pen.
2. To help reduce Cuddle® dust, cut Luxe Cuddle® on the reverse side with a craft knife. Use a rotary cutter or scissors on Cuddle® panel and backing.
3. Shake cut pieces or put in a no-heat dryer with a damp washcloth for a few minutes to remove any remaining loose fibers.
4. Sew with polyester thread in the top and the bobbin.
5. Use 2 rows of pins—the first row every 1 1/2" along the seam line and a second row 1" to the left and parallel to the cut edge.
6. Increase stitch length to 3–4 mm.
7. Backstitch at the beginning and end of each seam.
8. Seam allowances are 1/2" unless otherwise noted.
9. Use a walking or even-feed foot, if possible. It makes a difference!

